

WOVEN

500mmx500mm | GlueDown 2.5(0.55)mm




● GlueDown 2.5(0.55)mm有现货
 ▲ LLT 5.0(0.55)mm有现货




NC01 | NC03 | NC14 | NC23

WOVEN


500mm×500mm | GlueDown 2.5(0.55)mm

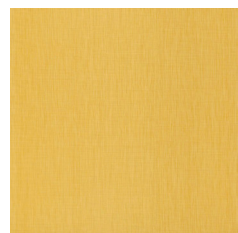


NC17

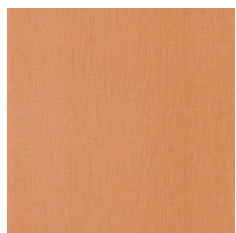


NC18

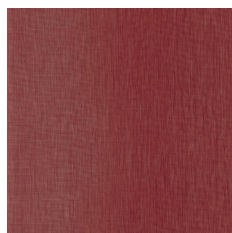


NC15

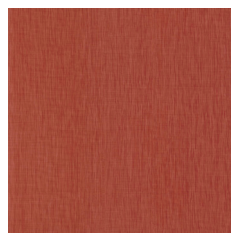


NC16

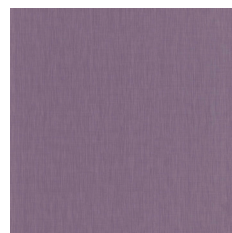


NC27

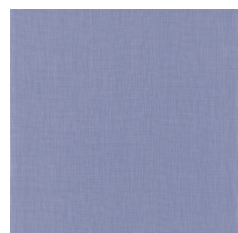


NC26

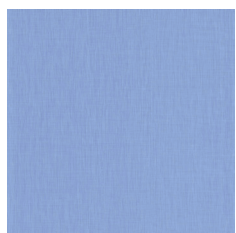

NC21

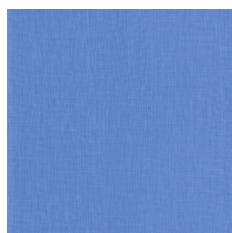


NC20

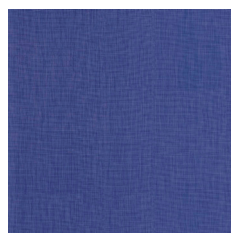

NC19




NC22

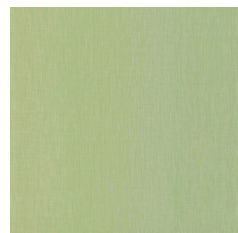


NC23



NC24

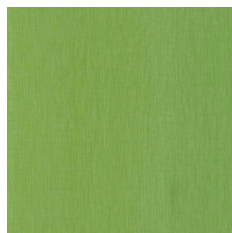


NC01

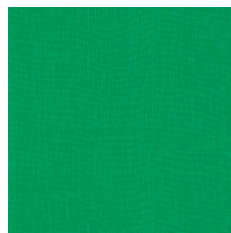


NC25



Design Idea

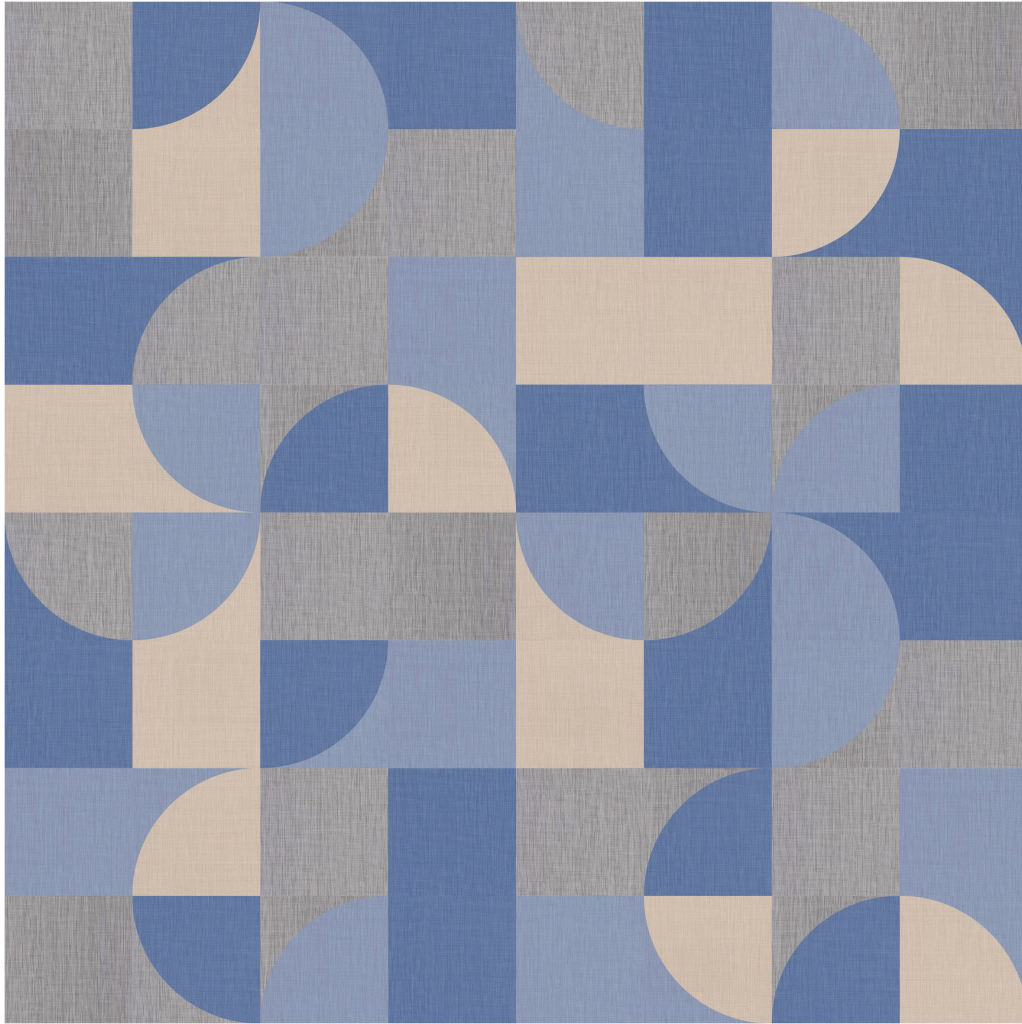

NC02 | NC03 | NC20 | NC21

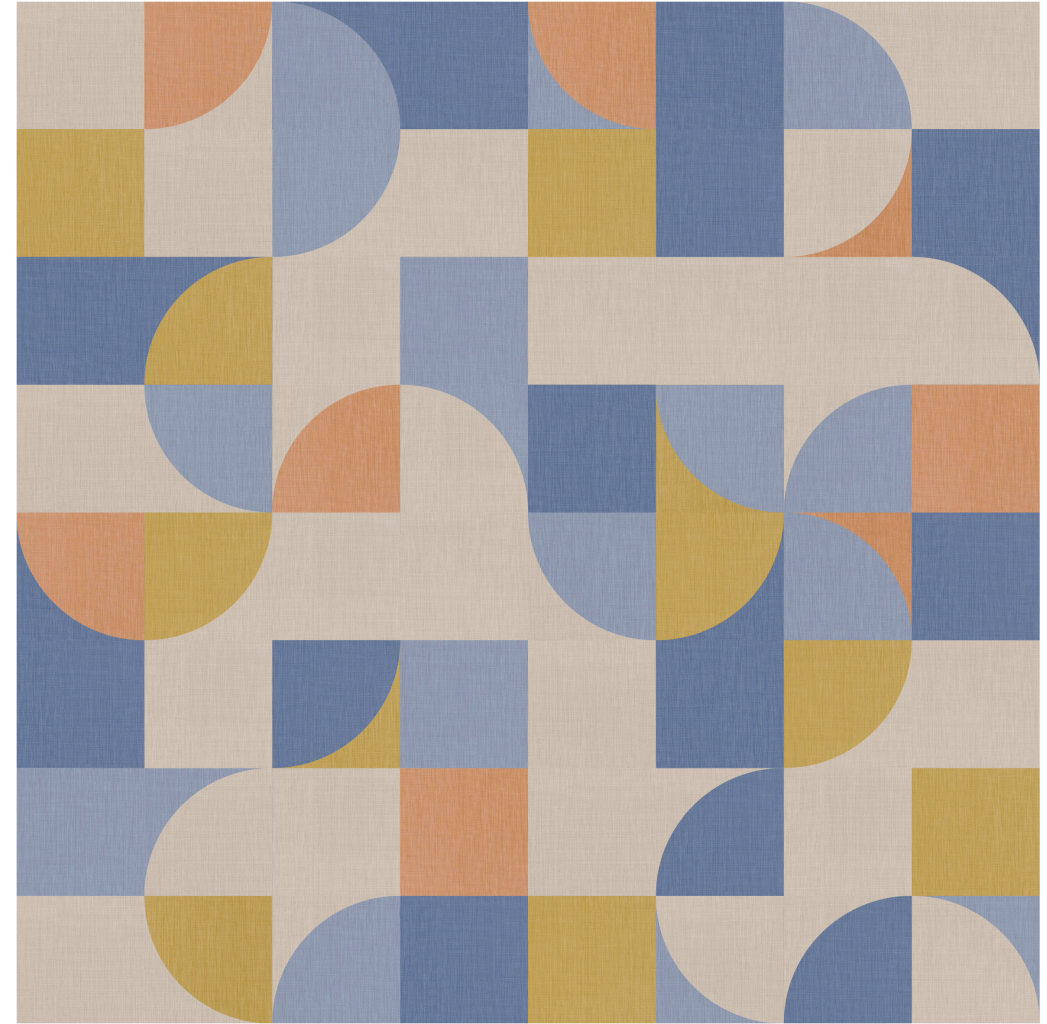

NC03 | NC17 | NC18 | NC20 | NC21

异型需要工人现场手工切割

Design Idea



NC03 | NC05 | NC14 | NC20 | NC21



NC01 | NC03 | NC05 | NC14 | NC23

异型需要工人现场手工切割

Design Idea




NC02 | NC05 | NC17 | NC19 | NC20 | NC21




NC01 | NC02 | NC05 | NC17 | NC23 | NC24

异型需要工人现场手工切割

Design Idea

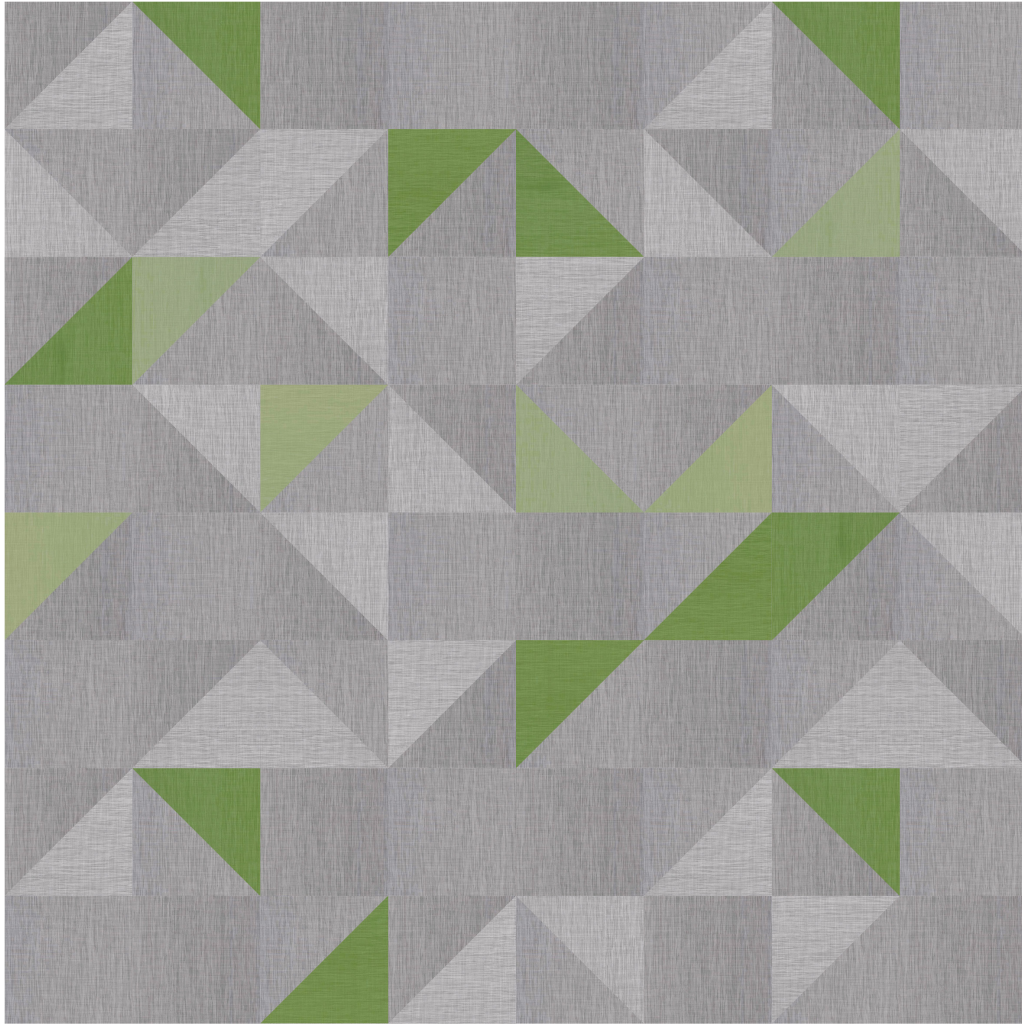


NC01 | NC02 | NC05 | NC23

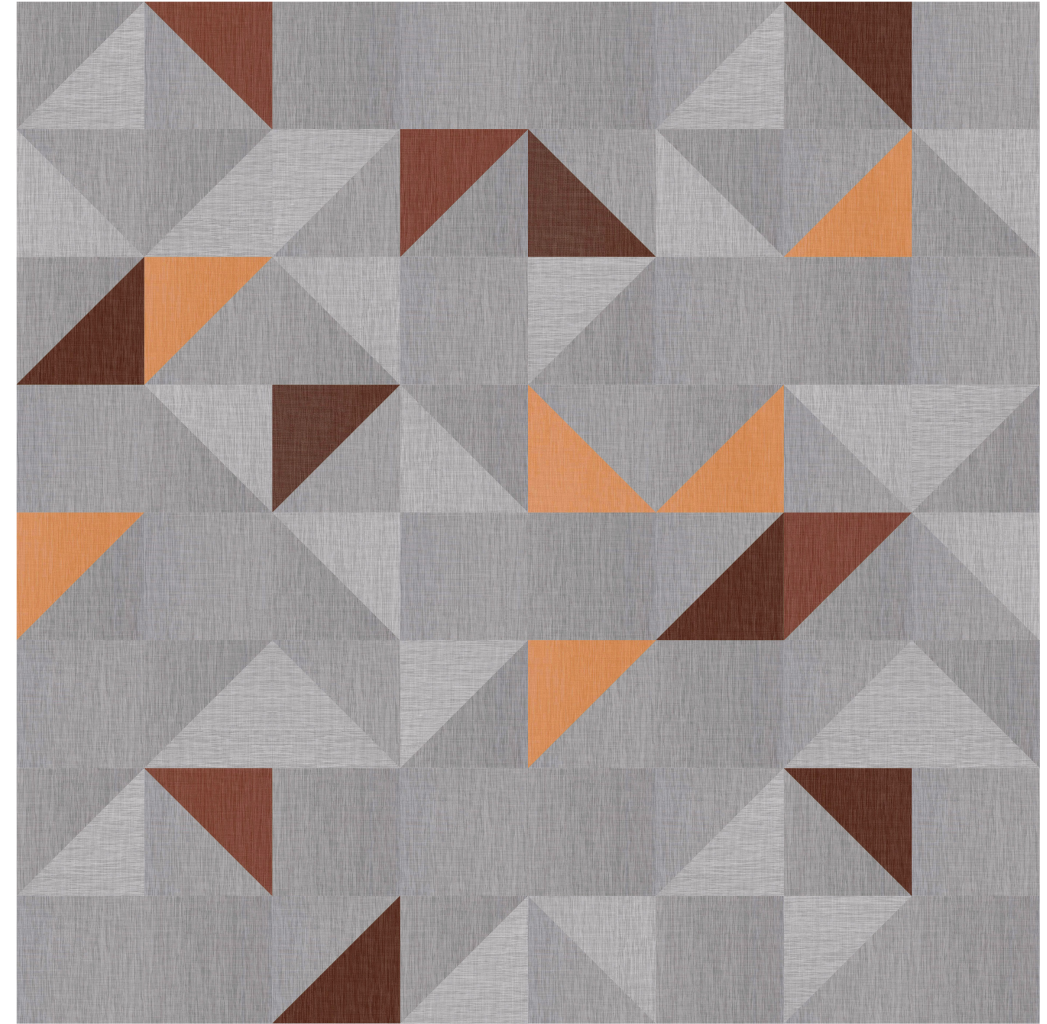

NC02 | NC05 | NC15 | NC16 | NC18

异型需要工人现场手工切割

Design Idea

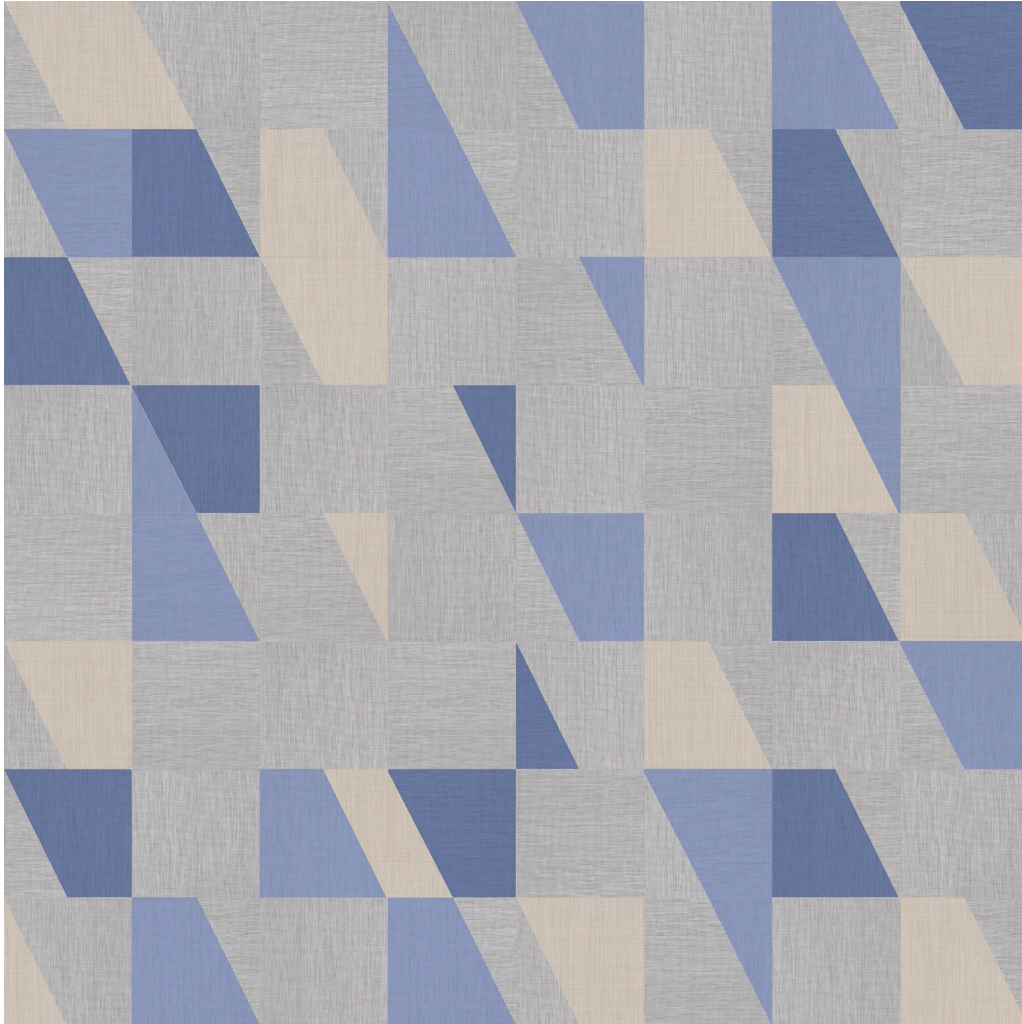


NC03 | NC05 | NC20 | NC21



NC03 | NC17 | NC18 | NC20 | NC21

异型需要工人现场手工切割

Design Idea

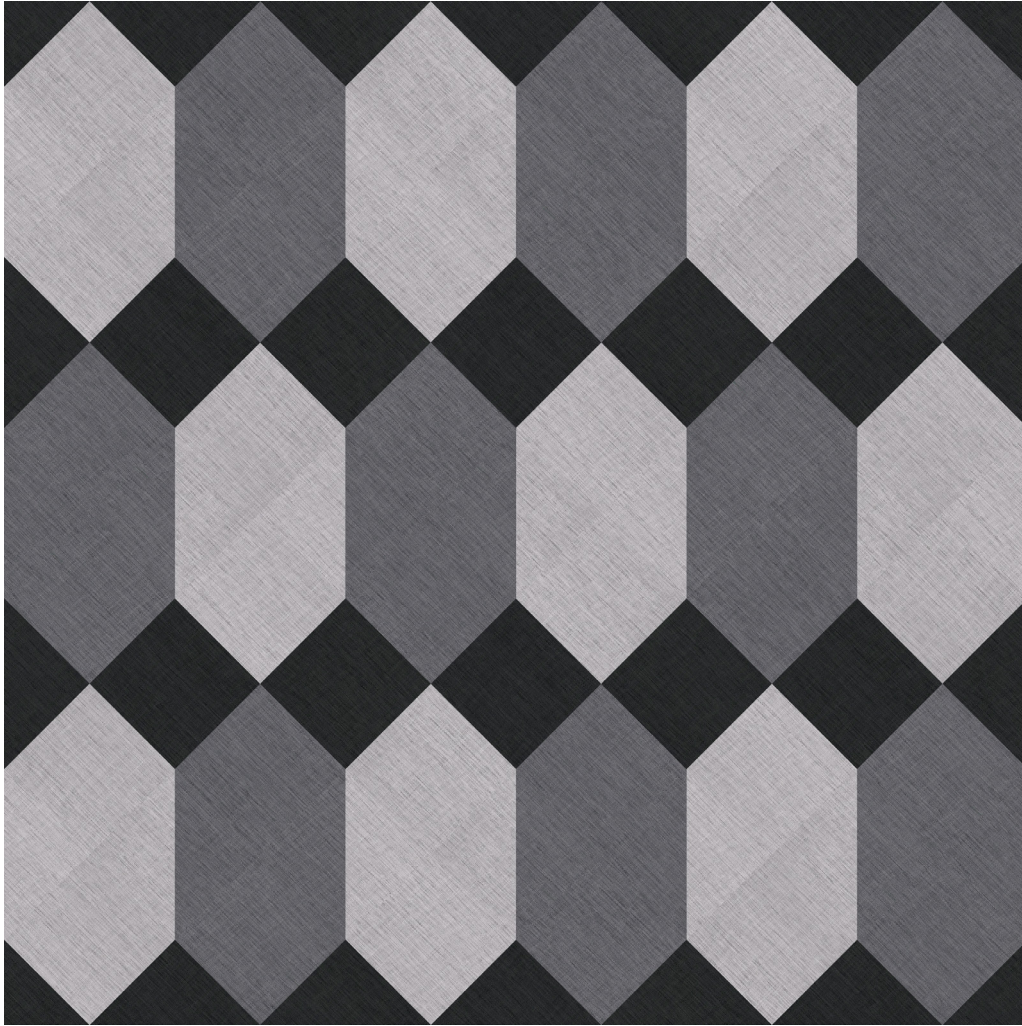

NC05 | NC11 | NC12

异型需要工人现场手工切割

安装方法

产品底背箭头需按照图示**转角铺设**

